



**⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT**


**⚠ WARNING**

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

**⚠ IMPORTANT**

There are **TWO different methods for installing our Cabinets**, the First way is to affix them into our shelving bays at a height of your choice, the Second way is to affix them to the floor via 4x plinths or "L" brackets provided. *Please refer to the section below that suits your choice of affixing method*

Each Cabinet should come with:

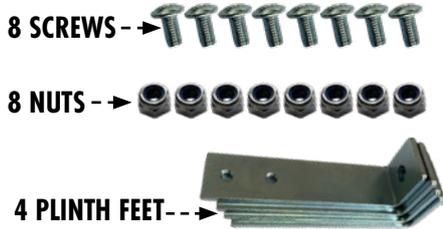

**BEFORE YOU BEGIN:**


- READ ALL INSTRUCTIONS PRIOR TO INSTALLING
- WHEN INSTALLING, ENSURE YOU HAVE SOMEONE ASSIST YOU TO AVOID VEHICLE DAMAGE OR ANY PERSONAL INJURY
- ENSURE IT IS SAFE BEFORE DRILLING OR CUTTING ANYWHERE ON THE VEHICLE & INSTALLING ALL PRODUCTS
- CONFIRM YOU HAVE ALL THE NECESSARY PARTS, TOOLS, AND EQUIPMENT BEFORE COMMENCING
- ENSURE ALL PARTS & COMPONENTS REQUIRED TO COMPLETE THE BUILD ARE CONFIRMED AS DELIVERED AND IN POSSESSION

**⚠ ATTENTION**


IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL

**JOINING 2 OR MORE CABINETS TOGETHER HORIZONTALLY**


**A** If you bought a Cabinet Kit, please remove all cases from the cabinet first, if you have an empty Cabinet you can skip to Step B

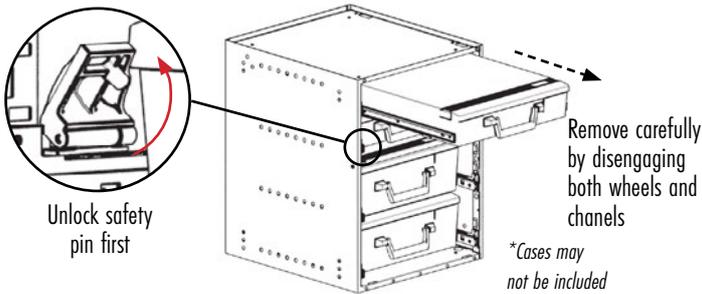


**B** Join both cabinets next to each other as described in the image below, then secure with up to 8x screws on the circled holes with their respective nuts

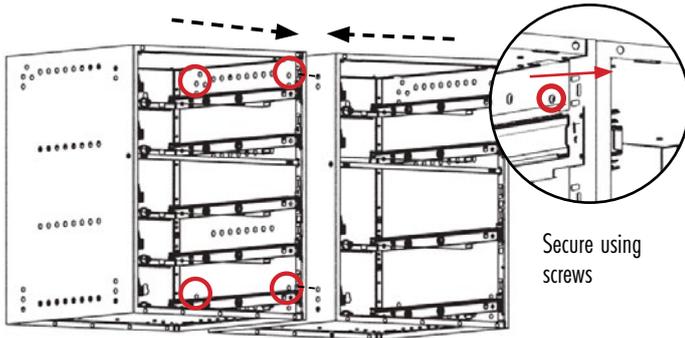

**C** Both cabinets are now joined together and can be either mounted into a RolaShelf bay using 2x RSBAR/80 'Support Bar' (not included) or onto the ground using plinth feet. Please note you can use 6x plinth feet per pair of cabinets, putting 2x plinth feet on each wall to fully support your cabinets (refer to the second method of this guide)

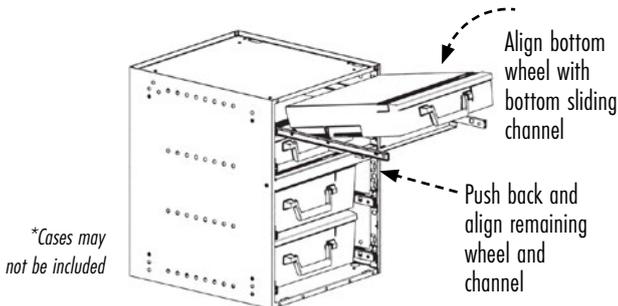


**D** If you have cases, carefully reinstall the RolaCases into the roller bearing slides by pushing gently without damaging the slides and the cases, refer to previous image

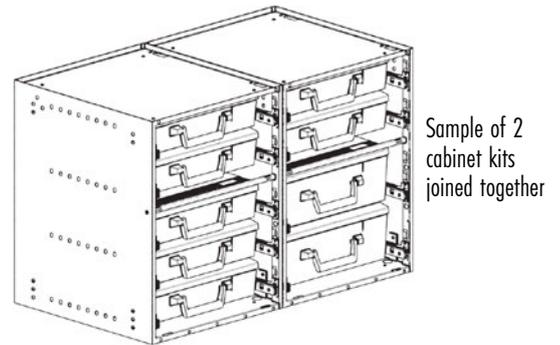

**FIRST METHOD: INSTALLING 2 JOINED CABINETS IN AN 8 SERIES FRAME**

- A** First you need to join 2 cabinets together, please refer to previous steps
- B** Trial position the joined cabinets in an ideal position anywhere on the perforated shelving frame (please note: the frame should be installed in the vehicle first, this is also where you will find the screws/hardware to fit your cabinets to the posts) whilst ensuring the grid pattern on the cabinets ends marries up with the holes on the twin posts. Note that RolaCase's cabinets are very versatile within the shelving bays and can be secured in many different varying positions
- C** If you wish, you can use the disposable plastic plugs that come in our 'Starter' and 'Extension' frames (sold separately) to hold your joined cabinets in place while deciding where to secure it
- D** Secure 2x RSBAR/80 (sold separately) underneath where your cabinets will be, ensure that the 2x RSBAR/80 'Support bars' will be supporting the cabinets and all holes are aligned, 2x holes should be secured per side

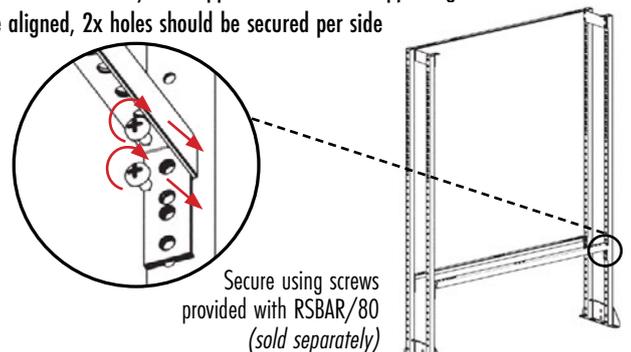


**⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT**


**⚠ WARNING**

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

**E** Secure the selected joined cabinets to the frame posts using a "P3" Phillips Head screwdriver or a cordless drill with a low torque setting and the screws. Please ensure you do not over tighten these screws as it is unnecessary and it may also strip the thread. Depending on the type of cabinet you are securing, you may be using either 4 or 6 screws per side, refer to next image

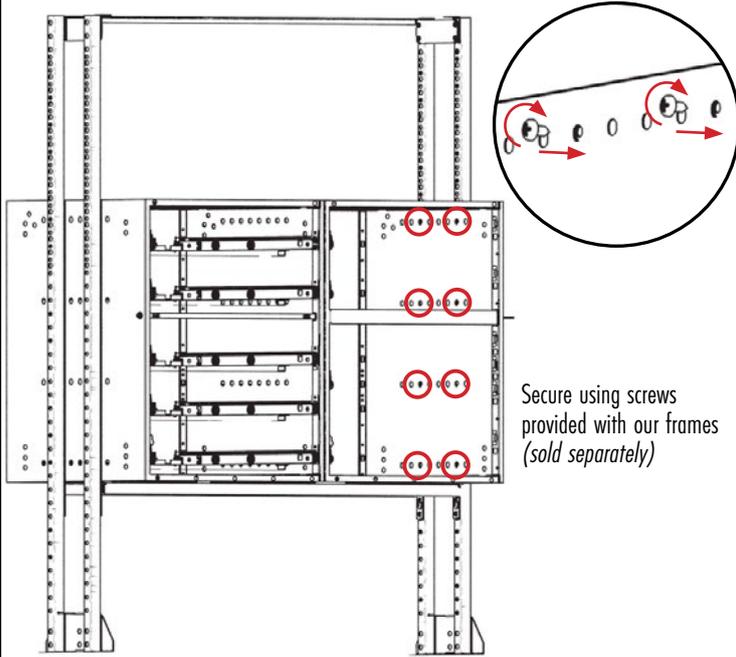

**F** If your cabinets include RolaCases place them carefully without damaging the slider and the RolaCase

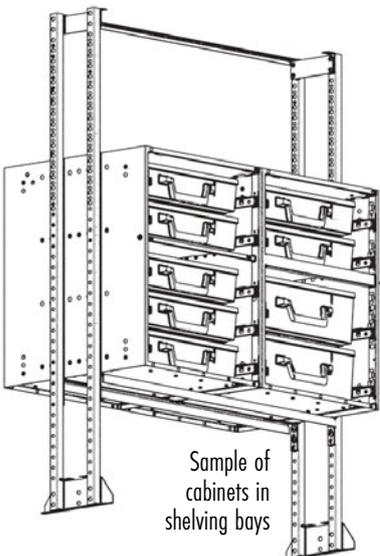


**⚠ ATTENTION**

IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL


**SECOND METHOD: CABINETS ON THE FLOOR**

**A** If you bought a Cabinet Kit, please remove all cases from the cabinet first, if you have an empty Cabinet you can skip to Step B

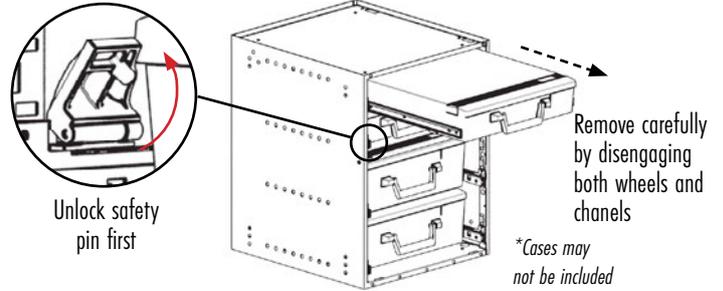

**B** Find a suitable surface and place the empty cabinet on its back



**C** Locate the 4x floor plinths or "L" brackets supplied and determine the desired direction for affixing to the floor

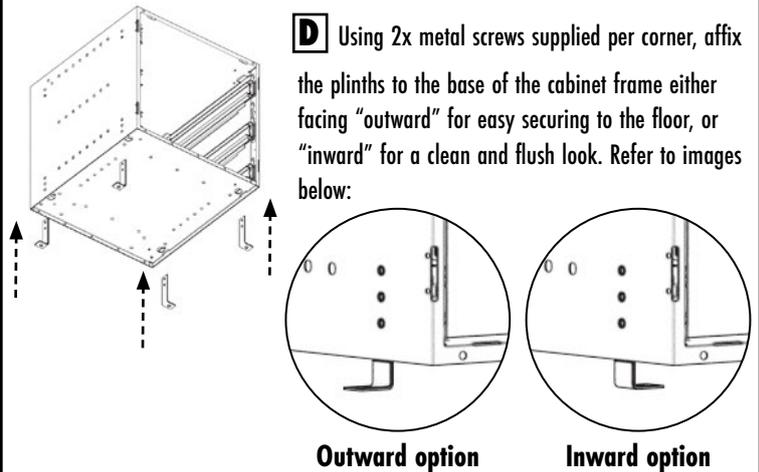

**E** Now flip cabinet on its feet or plinths and select a suitable location to affix to the floor with screws (use suitable hardware to secure, not included)

**F** Carefully reinstall the RolaCase into the roller bearing slides by pushing gently without damaging the slides and RolaCases.

**G** Test opening & closing of RolaCases and slides for correct operation

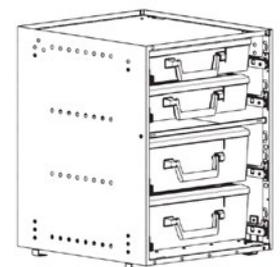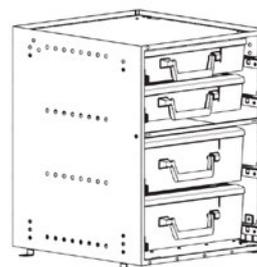

For further details please go to [www.rolacaseusa.com](http://www.rolacaseusa.com)