


⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT

DESCRIPTION:

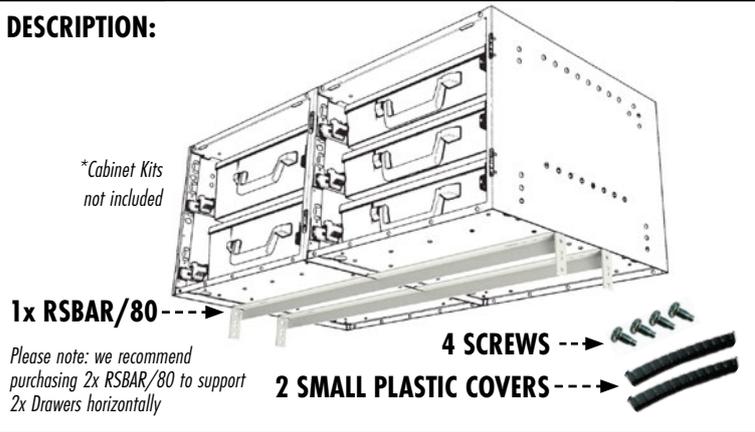

⚠ WARNING

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

BEFORE YOU BEGIN:

- THE AVERAGE EXPECTED INSTALL TIME FOR THIS PRODUCT IS **20 MINUTES**
- READ ALL THE INSTRUCTIONS BEFORE ASSEMBLY & INSTALLATION
- ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT, ESPECIALLY EYEWEAR WHEN INSTALLING OUR PRODUCTS
- CONFIRM YOU HAVE ALL THE NECESSARY PARTS, TOOLS, EQUIPMENT, & TIME REQUIRED BEFORE COMMENCING

**PART No. RSBAR/80 suits the following models:
 Can be installed on the following products:**

- All "8 series" bays (Start frame - RSSFR/HD/80/1539 or 2006 and/or Extension frame - RSEFR/HD/80/1539 or 2006)

⚠ ATTENTION

All RolaShelf shelving products are to be used exclusively and in conjunction with RolaCase and RolaShelf shelving bays only. Failure to do so will cause the shelving/products to perform in a nonfunctional manner and will void your warranty

TOOLS REQUIRED:



⚠ ATTENTION


IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL

The RSBAR/80 that suits the "8 series" frames is made up of the following part that needs to be located and affixed with the hardware provided:


1 2x RSBAR/80 (Support Bars)



- A** Before you begin, you need your frame (sold separately) to be installed inside your vehicle, please make sure this is done prior to commencing the installation of the RSBAR/80 support bars
- B** You need to join 2 '4 Series' metal drawers* and/or cabinets together* in order to fit into an '8 Series' bay* (*sold separately) refer to their individual installation manuals
- C** Then you need to trial the metal drawers and/or cabinet kits together into the bays (refer to their specific installation manuals)
- D** We highly recommend securing 2x RSBAR/80 underneath where your cabinets will be. Ensure that the 2x RSBAR/80 'Support bars' will be supporting the cabinets and all holes are aligned, 2x holes should be secured per side

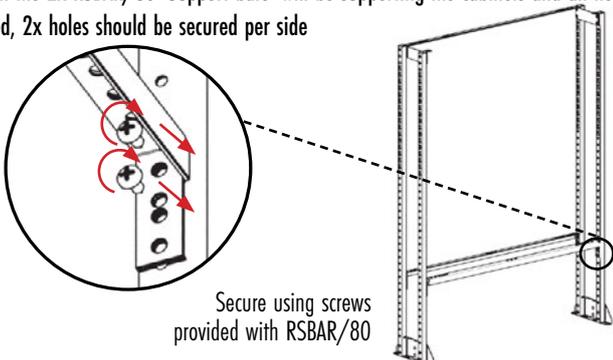

Secure using screws provided with RSBAR/80

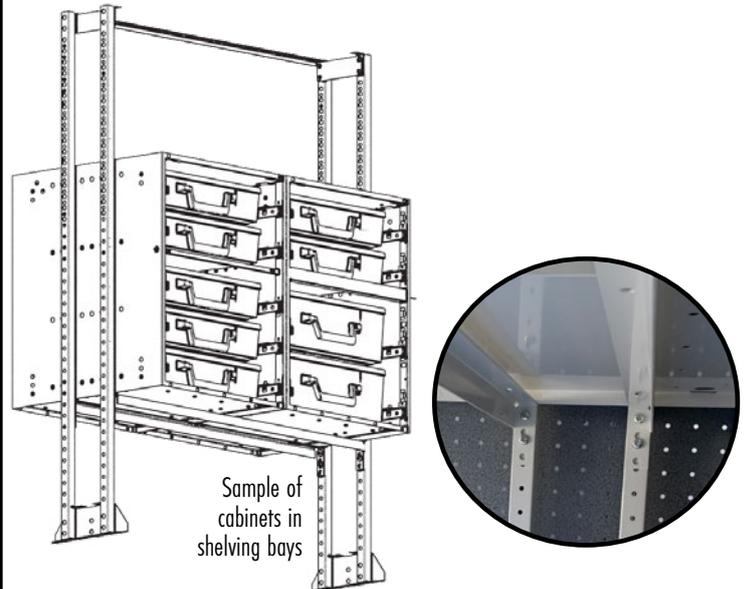

Sample of cabinets in shelving bays



For further details please go to www.rolacase.com