




**⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT**

**RSCGBHPFT148H20**

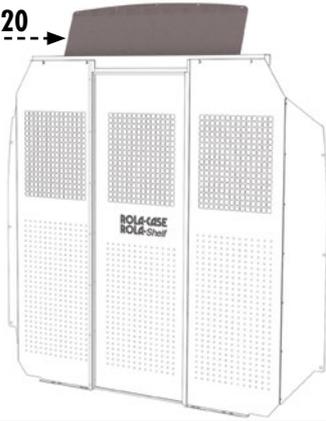

**⚠ WARNING**

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

**BEFORE YOU BEGIN:**

- THE AVERAGE EXPECTED INSTALL TIME FOR THIS PRODUCT IS **15 MINUTES**
- READ ALL THE INSTRUCTIONS BEFORE ASSEMBLY & INSTALLATION
- ENSURE YOU HAVE SOME ASSISTANCE FROM A SECOND PERSON TO AVOID VEHICLE DAMAGE OR ANY PERSONAL INJURY
- BE AWARE ON THE LOCATION OF VEHICLE WIRING, GAS TANKS, GAS LINES, BRAKE LINES, & ANY OTHER IMPORTANT ITEMS
- ENSURE IT IS SAFE BEFORE DRILLING OR CUTTING ANYWHERE ON THE VEHICLE & INSTALLING ANY OF OUR PRODUCTS
- CONFIRM YOU HAVE ALL THE NECESSARY PARTS, TOOLS, EQUIPMENT, & TIME REQUIRED BEFORE COMMENCING

**PART No. RSCGBHPFT148H20 suits the following models:**

- 2014-2020 FORD TRANSIT 150, 250, 350 HIGH ROOF 130" & 148" W/B IN CONJUNCTION WITH THE ROLACASE MID/HIGH ROOF FORD TRANSIT PARTITION RSCGBFT130148MH20 - *SOLD SEPARATELY*

**TOOLS REQUIRED:**



Screw Drivers



Cordless Drill with Torque settings



Ratchet, sockets, and/or spanners

**⚠ ATTENTION**

IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL

The RolaCase Ford Transit High Roof header panel converts your default Mid roof partition into a High roof partition.

It is designed to substitute the "Upper Mid Roof Header Panel" component in the Rolacase Ford Transit Mid roof kit (Part#: RSCGBFT130148MH20 *sold separately*).

This upper head panel is made up of the following part:

**UPPER HEADER PANEL PART**



A. Upper High Roof Header Panel

**USE HARDWARE PROVIDED WITH PARTITION RSCGBFT130148MH20 - *SOLD SEPARATELY***

The Partition for Ford Mid Roof is made up of the following parts:

**PARTITION PARTS - SOLD SEPARATELY**



*NOT VISIBLE can be seen from cabin side*

- |                                |                         |
|--------------------------------|-------------------------|
| 1. Upper Cross Mount Beam      | 6. R/H Standard Setback |
| 2. Upper Mid Roof Header Panel | 7. L/H Standard Setback |
| 3. Centre Panel                | 8. Lower Brace          |
| 4. R/H side Panel              |                         |
| 5. L/H side Panel              |                         |


Part #2 above is simply substituted for this High Roof component using the same hardware and instructions provided in that kit. A simple recap of these instructions can be found below

**⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT**

**⚠ WARNING**

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

**A** Begin by locating the Upper Cross Beam and substituting the Upper Mid roof header panel shown below for the High Roof Header Panel purchased separately. Assemble the two products together using 9x "M8 x 20mm" bolts and Nyloc nuts provided, refer to image below:

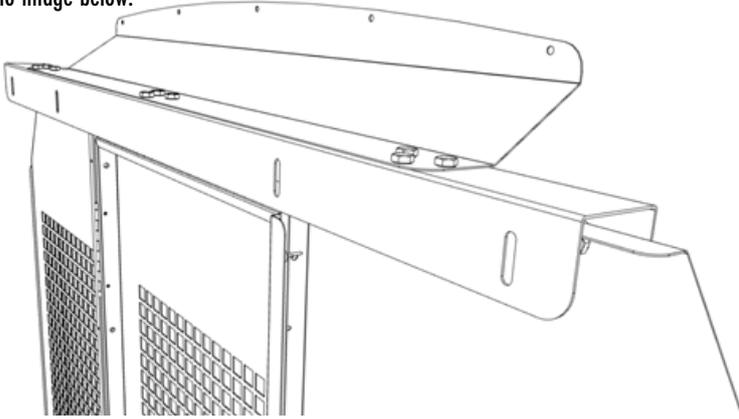


**B** Once the partition unit is fully assembled, use two people to lift the assembly into the van via the side door and position into place

**C** Mark out the 5 positions on the factory High roof beam frame that match the upper High roof partition header panel. Refer to the "A to E" orange bubble points in image below

**D** Use two people to temporarily move the partition out of the way

**E** Drill the 5 points on the factory roof beam that you previously marked out to secure the 5x "M6" Rivet Nuts supplied in the Mid roof partition kit sold separately, these would be the "A to E" orange bubble points in the next image

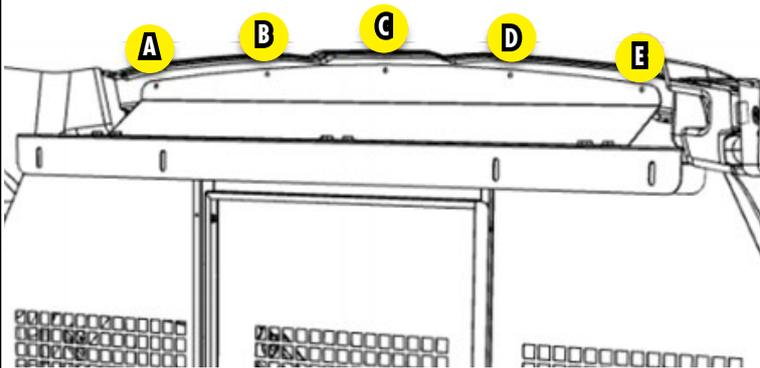

**F** Use two people to reposition the partition in the correct and final resting place

**G** Insert the 5x "M6 x 20mm" pan bolts and spring washers through the header panel and into the Rivet Nuts on the roof pillar of the vehicle. Refer to the "A to E" orange bubble points in the image above

**H** Go back through to double check and tighten all bolts securing the partition assembly components to the vehicle

**NOTE:** This is an abbreviated recap only, full instructions can be found in the Kit provided with the purchase of the RolaCase Ford Transit partition part# RSCGBFT130148MH20 (sold separately)

**⚠ ATTENTION**

IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL

**ROLA·CASE**  
**ROLA·Shelf**

**ROLA·CASE**  
**ROLA·Shelf**

**ROLA·CASE**  
**ROLA·Shelf**

For further details please go to [www.rolacase.com](http://www.rolacase.com)