


# RAM PROMASTER 118", 136" & 159" WB

## ROLACASE POST HEIGHT REFERENCE GUIDE

For anchor kits: RSVAKRPM118SR20, RSVAKRPM136SRHR20 and RSVAKRPM159HR20

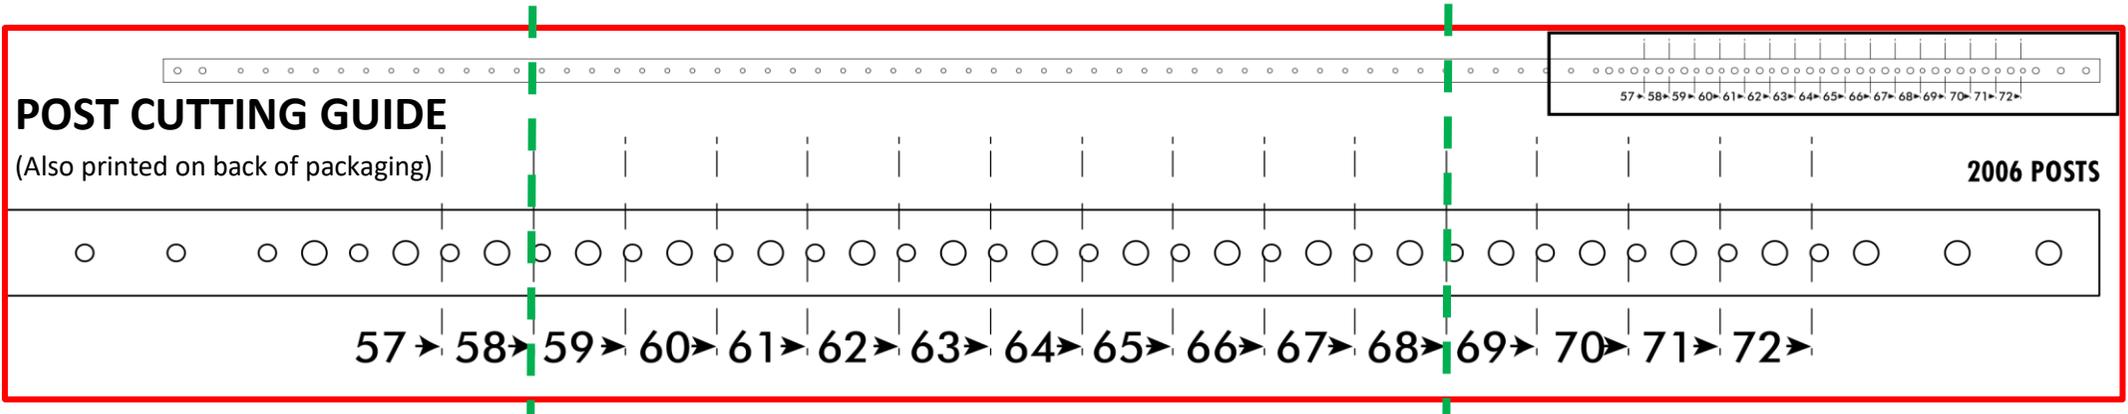

### How To Cut Your Posts:

1. Use this table to check the posts match your vehicle and ensure you have the correct posts for your vehicle model

Vehicle	Product Codes that suit your vehicle	Cut at Number (Dotted line on guide)	Actual Cut Height
Ram Promaster 118/136" Standard Roof	RSSFR/HD/80/2006 RSEFR/HD/80/2006	58	61.4" (1560mm)
Ram Promaster 136/159" HIGH Roof	RSSFR/HD/120/2006 RSEFR/HD/120/2006	68	71.6" (1819mm)

2. Identify position **58** or **68** on your post. On the back of the package box (where you received your posts) you will find a 1:1 scale guide. You can use this guide to cut at the desired number
3. Cut the post in the position indicated by the dotted line on the guide.



**WARNING:** These instructions are to be used in conjunction with our vehicle specific roof anchors only (sold separately). If using Universal Anchors, please refer to Post Kit Instructions.

**Note:** Floor Anchors can go beneath rubber mats for a cleaner look. This height guide is designed to go on the bare floor of the vehicle, however these heights will still work with floors up to 3/4" thick. For more information, please go to our support page ([www.rolacase.com/installation-videos/](http://www.rolacase.com/installation-videos/))